

Installation Guide

Hardware Overview

S412 Overview

S412 Lite Overview

S20 Overview

S50 Overview

S100 Overview

S300 Overview

Expansion Board

Install PBX

Connect Your PBX

Getting Started Guide

Admin Guide

Security Guide

Compatible SIP Endpoints

Solution & Interoperability

Auto Provisioning

Yeastar Linkus

Conference Panel

LDAP Server

QueueMetrics Integration

Hotel

Billing

char utile h+ Integration

VPN Server

Zoho Integration Guide

References

Front Panel

S412

Yeastar

1

2

3

4

5

6

7

8

9

10

11

12

1

2

3

4

Power Indicator

System Status

WAN Status

LAN Status

FXS Status

Line Status

LED	Indication	Status	Description
POWER	Power status	On	The power is switched on.
		Off	The power is switched off.
SYSTEM	System status	Blinking	The system is running properly.
		Static/Off	The system goes wrong.
WAN	WAN status	Static	Linked normally.
		Blinking	In communication.
		Off	Off-line.
LAN	LAN status	Static	Linked normally.
		Blinking	In communication.
		Off	Off-line.
1-4 (Line status)	GSM/3G/4G	Red: static	The GSM/3G/4G Trunk is idle.
		Red: blinking slowly	No SIM card.
		Red: blinking rapidly	The GSM/3G/4G trunk is in use.
	BRI	Orange: blinking	The BRI line is disconnected.
		Orange: static	The BRI line is connected or in use.
	FXO	Red: static	The PSTN line is idle.
		Red: blinking slowly	No PSTN line is connected to the FXO port.
		Red: blinking rapidly	The PSTN line is busy.
	1-12 (FXS port)	Green: static	The analog phone is idle.
		Green: blinking	The analog phone is busy.

Rear Panel

https://help.yeastar.com/en/s-series/installation/s412\_overview.html

1/2

Port	Description
RJ11 (Line port)	<ul style="list-style-type: none"><li>• <b>FXO port</b> (red light): For the connection of PSTN lines or FXS ports of traditional PBX.</li><li>• <b>BRI port</b> (orange light): For the connection of ISDN BRI lines.</li></ul> <p><b>Note:</b> The sequence number of the ports corresponds to the indicators in the front panel.</p>
RJ11 (FXS port)	<ul style="list-style-type: none"><li>• <b>FXS port</b> (green light): For the connection of analog phones.</li></ul> <p><b>Note:</b> The sequence number of the ports corresponds to the indicators in the front panel.</p>
WAN/LAN	<p>Yeastar S412 provides two 10/100Mbps adaptive RJ45 Ethernet ports, and supports 3 Ethernet modes. The default mode is “Single”.</p> <ul style="list-style-type: none"><li>• <b>Single:</b> LAN port will be used for uplink connection. WAN port is disabled.</li><li>• <b>Bridge:</b> LAN port will be used for uplink connection. WAN port will be used as bridge for PC connection.</li><li>• <b>Dual:</b> Both LAN and WAN ports can be used for uplink connection.</li></ul>
TF Slot	Insert TF card to store auto recording files.
Reset Button	Press and hold for 10 seconds to restore the factory defaults.
Power Inlet	Connect the supplied power supply to the port.